

ST-PKB-61

USER'S MANUAL

61 KEYS DIGITAL ELECTRONIC KEYBOARD

Caution

Be sure to follow the below warnings to avoid hurting yourself or others and to avoid damage to the equipment.



Warning

- Do not disassemble or modify this instrument. Otherwise, Electric shock, burns, or other harm may be incurred. For all internal inspections and repair, be sure to take this unit to a qualified professional.
- If any wear or damage occurs to the power cord or plug, or you experience any power failures, or you smell an unusual odor, you should immediately turn off the power, remove the plug, and contact your local technician.
- Before cleaning your electric keyboard, be sure to power off and unplug the power cord. Do not operate with wet hands and do not wipe and clean the piano with a corrosive solvent.
- Do not mount the electrical piano on a mobile stand, slanted, or otherwise unstable surface. Otherwise, the piano may fall causing damage to the piano or harm to the user. Be sure to secure the electric piano to the stand with the provided screws.
- Keep the electric piano from rain, wet places, or areas of high humidity. Do not place the following items on the electric piano:
 - Containers full of water or other liquids.
 - Small Metal Objects that can fall into the piano, such as hairpins, sewing needles, coins.
 - Open flames.



Caution

- Avoid placing the piano in the following places to prevent the surface and internal components of the piano from damage:
 - Places of high humidity and dust
 - The kitchen or any other place with fumes.
 - In places of direct sunlight or anywhere else that may cause the instrument to become too hot.
 - Near other electronic appliances, such as the TV, radio, speakers, etc. To avoid electrical noise disturbances.
- Do not place heavy items on the piano and do not press any buttons or keys too hard.
- When not using the piano for long periods, please remove the plug. When removing the plug, be sure to pull it out by the plug and not the wires.
- Be sure to follow all instructions when installing the rack. Make sure to fasten all screws and fasteners.
- When moving the electric piano, lift with at least two people. If you try to move the piano on your own, you may strain yourself or cause damage to the piano.
- Be sure to regularly check that screws remain fastened.

- Do not place power cord near high sources of heat. Avoid over wrapping the power cord. Do not place anything heavy on power cord, and do not place the power cord where people walk.
- Do not play music too loudly for extended periods of time. Be careful with headphones, as loud music will hurt your ears.

 
Contents

I . Top Panel Control and Rear External Connections	1
1.Top Panel Control.....	1
2.Rear External Connections.....	1
II. Preparation before performance	1-3
Power Supply	1
1.Using AC-DC power adapter.....	2
2.Using batteries.....	2
External Connections	2
1.Using microphone.....	2
2.using headphone.....	2
III. Basic Operation	2-6
I. Basic playing method	2
1.Switching on power.....	3
2.Adjusting the Master volume.....	3
Voice	3
1.Selection of Voice.....	3
Effect and Control	3-5
1.Keyboard drum.....	3
2.Sustain.....	4
3.Vibrato.....	4
4.Keyboard Split.....	4
5.Tempo.....	4
6.Transpose.....	4
7.Fine tuning.....	4
8.Beat.....	4
9.Top Percussion.....	5
10.Pitch bend.....	5

Rhythm accompaniment and its Function	5
1.Start /stop.....	5
2.Sync.....	5
3.Fill-in.....	6
4.Accomp Volume.....	6
Chord accompaniment	6
1.Single Finger accompaniment.....	6
2.Fingered accompaniment.....	6
3.stop the Accompaniment.....	6
Recording.....	7
Single Demo Song.....	7
Auto released Demo Songs.....	7
Guide function.....	7
Appendix I Voice.....	8
Appendix II Rhythm.....	9
Appendix III Demo Songs.....	10
Appendix IV Trouble Shooting.....	11
Appendix V Technical Specifications.....	12


1 I.Panel Control and External Connections

I. Panel Control

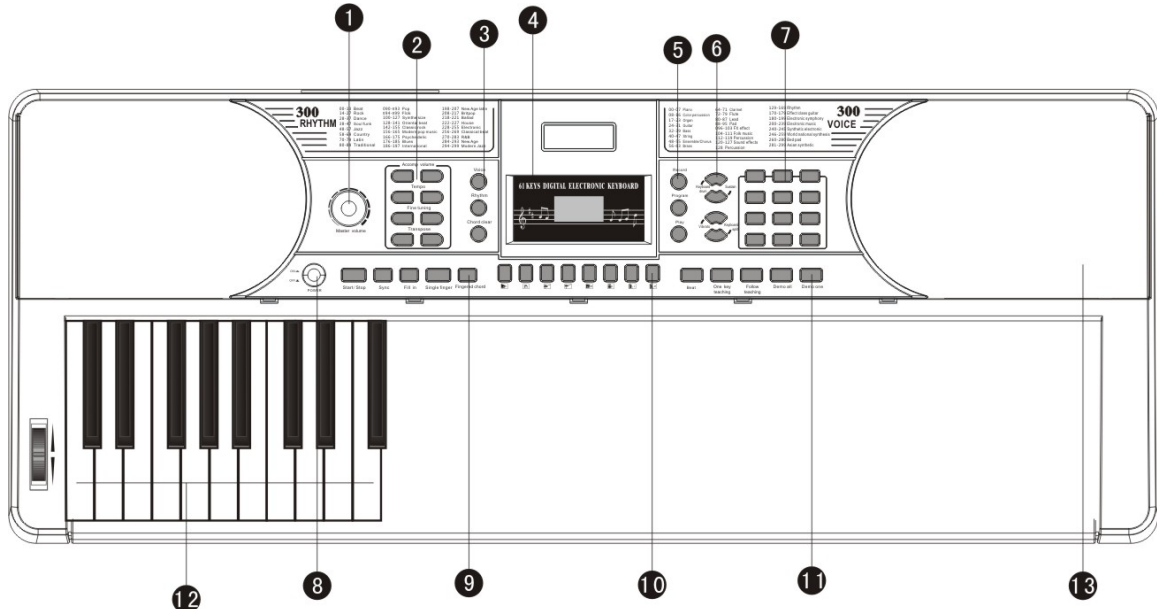

<p>1.Master Volume 2.Accomp volume /Tempo/ Fine tuning/Transpose 3.Voice/Rhythm/Chord Clear 4.LED Digital Display 5.Record/Program/Play</p>	<p>6.Keyboard drum/Sustain/ Vibrato/Keyboard Split 7.Digit Key1-9/+ -button 8.Power Switch 9.Start/Stop/Sync/Fill in/single finger/Fingered chord</p>	<p>10.Panel percussion 11.Beat/One key teaching/ Follow teaching/Demo all/ Demo one 12.Auto Chord 13.Sperkers</p>
--	--	--

 2. External Functions

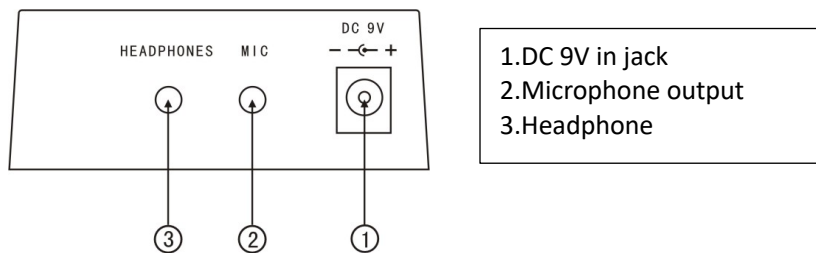

- 1.DC 9V in jack
- 2.Microphone output
- 3.Headphone

 
II. Before Performance

Power Supply

1. Using AC-DC power adapter:


Please use the power adapter that was provided with this electronic keyboard or a power adaptor with DC 9V out voltage and 500mA out current. Insert the DC plug of power adaptor into the DC 9V power jack in the rear panel of electronic keyboard, then, insert the other end into Mains socket. (Notice: The input voltage of power adaptor must match the voltage of Mains), finally turn on power switch and start performance.

Caution: Disconnect the AC power adapter when not using your instrument to prevent possible damage due to power connection for extended period of time.

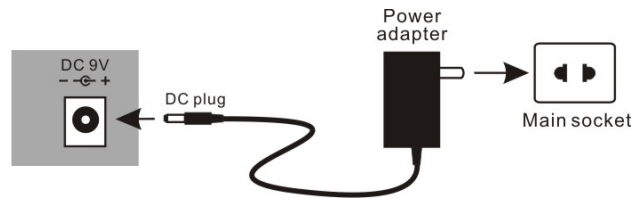

2. Using batteries: (excluded)

 Open the battery compartment cover located on the bottom panel of the instrument. Insert eight 1.5V D size LR-20 batteries, being carefully to follow the polarity marking on the cabinet. Replace the compartment cover, making sure that it locks firmly in place..

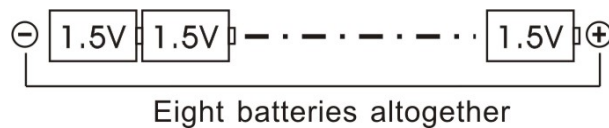

Caution: When the batteries run down, do not use different type of batteries at the same time.

Never mix old and new batteries. In case alkaline has leaked into the battery compartment; wipe it off completely before installing new batteries. To prevent possible damage due to battery leakage, remove the batteries from the compartment if it is not to be used for an extended period of time.

 
Rear External Connections

1. Using Microphone

A standard electret microphone (3.5mm) can be plugged into microphone jack .

2. Using headphone

A standard pair of headphones can be plugged into Headphone Jack for private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into the Headphones Jack.



Notice: the additional device above, needs to purchase seperately, it's not included with the keyboard.

3.

III. Basic Operation

I. Basic playing method

1. Power on

Press Power button to turn the power on, press again to turn off.



2. Master Volume

 
Rotate Master Volume knob clockwise to increase the Master volume and counter-clockwise to decrease the Master volume. Accompaniment volume will be changed accordingly when Master Volume be adjusted.



Voice

Selecting Voice


This keyboard has 300 different kinds of voices. The default status for the instrument is VOICE. Press VOICE button when the instrument is not in VOICE STATUS. Choose one of 300 Voices - shown on TABLE OF VOICES. Then enter its number by using numeric Voice BUTTON or by pressing +/- buttons in numeric group buttons to increase/decrease the current voice number.

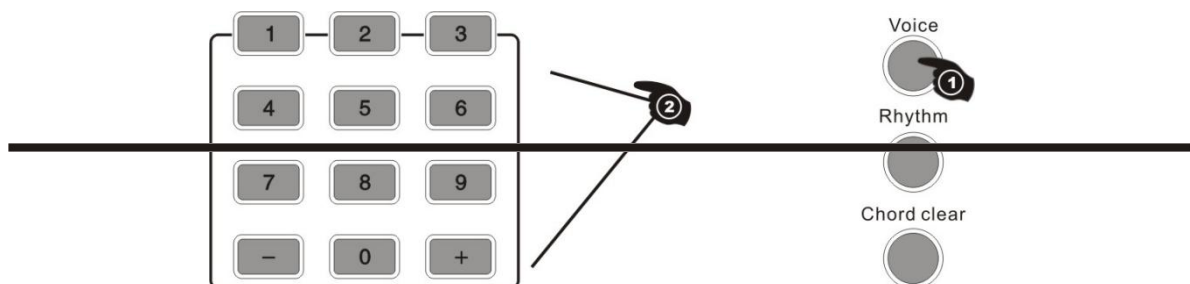

Effect and Control


1. Keyboard drum

 Press Keyboard drum button. Pressing different keys on the keyboard will play different drums. Notes played on keyboard will return to original voice by pressing the Keyboard drum button once again.

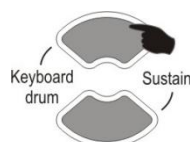


2. Sustain

 Press the Sustain button once, the notes played on keyboard will decay gradually after lifting your finger from keyboard. Press the Sustain button again to turn the sustain effect off.

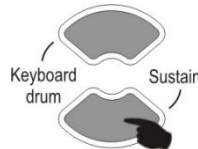


3. Vibrato

 Press Vibrato button to turn Vibrato effect on. Then pressing the black/white keys will produce the Vibrato effect.

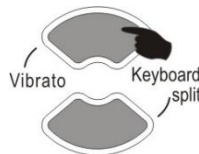


4. Keyboard Split

 Press Keyboard Split button to divide keyboard into left-hand keyboard and right-hand keyboard. The left 24 keys will be left-hand keyboard and the rest of the keys will be divided as right-hand keyboard. The voice on right-hand keyboard can be selected by pressing the number on numeric group buttons. Producer initially sets the voice on left-hand keyboard. Press the button once again to turn Split effect off.

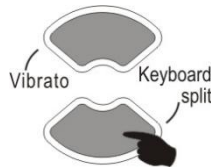


5. Tempo

 Press Tempo button + or - to increase or decrease the tempo value for rhythm, metronome and demo song. There is 210-tempo value among the range of tempo value from 30-240 beats per minute. Press + or - buttons simultaneously to return to default status at 120 tempo value.



6. Transpose

 Press Transpose button + or - to increase or decrease the transpose value up and down +/- 6 levels and shift the pitch of entire keyboard up and down in semitone intervals. Press the +/- buttons simultaneously to return to default status of keyboard tone.



7. Fine tuning

Press the Fine-tuning + or - buttons to micro control the tone within the range of 99 levels between the two connecting tones. Keep pressing + or - buttons to increase or decrease the levels continuously. Press the + and - buttons simultaneously to return to the level of initially set level.



8. Beat

Press the Beat button. The Beat voice will be produced. Select the Beat voice from 4 Beat voices, which is 1/4, 2/4, 3/4 and 4/4 beats, when you play the instrument by pressing the button once more time for different beats.



9. Top Panel Percussion

Select one of the 8 Percussion buttons and press it in accordance with the list as follows (total 8 kinds of percussion available for this instrument) to produce the percussion accordingly when you play.

Panel percussion list

Wood Block L	Hand Clap	Hi-Hat Open	Hi-Hat Closed	Snare L	Bongo L	Bass Drum H Soft	Bass Drum L

10. Pitch bend

 
Push up or pull down the pitch bend when you play to bend notes up or down continuously. Release the pitch bend to return the initial standard notes.



Rhythm Accompaniment and its Functions

1. Start /stop

Press Start/stop button to start and select the accompaniment from 0 to 299 in accordance with the appendix by pressing the number buttons in numeric group buttons, or by pressing +/- button, to select the accompaniment.

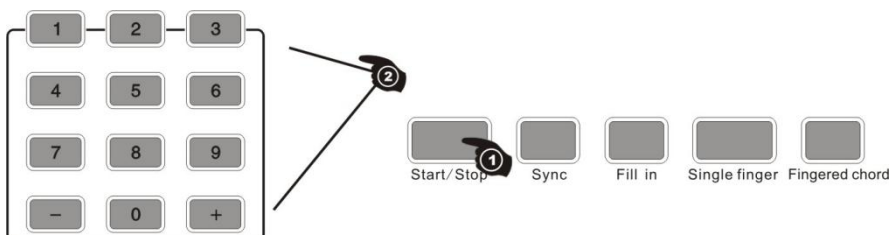

2. Sync

Press Sync button to start the Sync effect and press any key of the left 19 keys to have Rhythm when you play. In this case, the auto chord will be in effect when you play any key in left 19 keys if chord effect is started. Press the Sync button to end the Rhythm effect and start sync effect when rhythm is being played. Press Sync button to end sync effect when sync effect is running.



 
3. Fill in

Press Fill-in button to add a short fill in rhythm variation at any time while the rhythm is playing. Then the normal Rhythm will begin from next measure.



4. Accompaniment Volume

There are 8 levels of accompaniment volume. The default level of accompaniment volume is 06. Press + or - button to adjust the accompaniment volume with the selected volume being displayed on digital display. Press the + and - button simultaneously to reset the volume to default status.



Auto accompaniment

1. Single Finger

Press Start/Stop button to start the auto accompaniment. Then press Single Finger to start single finger accompaniment. Press any key of left 19 keys of the keyboard to begin rhythm. Press different key on left keyboard to select different chord. One key you press will always determine the root of the chord you played. Please refer to the following chart of playing C, Minor, Seventh and Minor-seventh Chords in Single finger Mode. Press Start/Stop button again to end the effect.



 
2. Fingered Chord

Press Start/Stop button to start the auto accompaniment. Then press Fingered accompaniment button to start fingered accompaniment. Press any key of left 19 keys of the keyboard to begin rhythm. Press different key on left keyboard to select different chord. Once you play any chord in auto accompaniment section of keyboard, the chord along with rhythm will be automatically begun to play. Please refer to the following chart of playing chord types. Press Start/Stop button again to end the effect.



3. Chord Clear

Press Chord Clear button to end the auto accompaniment under chord status, the rhythm will be continued to play.



Recording

1. Press Record button to engage the record mode. Then press any key in keyboard or voice of drums to start recording with Max. 48 while the number being shown on digital display. The recording will be automatically ended while record is full and FUL is shown on digital display. All previous record will be automatically cleared while recording the new one.

2. Press Play button to play the tones you recorded.

3. Press Program button to engage program mode.



Demo all

Press the Demo all even sing every song to play from the first song, and will automatically play all songs. press again to stop.



Demo one

Press the Demo one to sing songs, and will automatically play next song, then press to stop. Repeated pressing into the next songs.



Teaching function

Press the One key teaching or Follow teaching to enter the teaching function then press the number keys or the +/- button to select different teaching Songs. Press the one key teaching button once again to exit.

One key teaching: Whether you play correctly or not, the song will automatically played continuously.



Follow teaching: Follow the display to play the note correctly, then play the next note shown automatically on display.



8

Appendix I Voice

No.	Name of voice	No.	Name of voice	No.	Name of voice	No.	Name of voice	No.	Name of voice
00	Acoustic Grand Piano	60	French Horn	120	Guitar Fret Noise	180	Bright Violin	240	Psychedelic Synth Lead
01	Bright Acoustic Piano	61	Brass Section	121	Breath Noise	181	Stringed violin	241	Vibraphone Synth Lead
02	Electric Grand Piano	62	Synth Brass 1	122	Seashore	182	Trill violin	242	Marimba Synth Lead
03	Honky-tonk Piano	63	Synth Brass 2	123	Bird Tweet	183	Electronic violin	243	Metal FX
04	Rhodes Piano	64	Soprano Sax	124	Telephone Ring	184	Rock violin	244	Electronic FX
05	Chorused Piano	65	Alto Sax	125	Helicopter	185	rhythm Orchestra	245	Electronic String Ensemble
06	Harpichord	66	Tenor Sax	126	Applause	186	Pizzicato Violin	246	Wind FX
07	Clavichord	67	Baritone Sax	127	Gunshot	187	Pizzicato Ensemble 1	247	Clarinet FX
08	Celesta	68	Oboe	128	Percussion	188	Pizzicato Ensemble 2	248	Organ FX
09	Glockenspiel	69	English Horn	129	Rhythm electric Piano	189	Percussion band	249	Crystal FX
10	Music box	70	Bassoon	130	Baritone Xylophone	190	BaritoneSynth Contrabass	250	Synth Shamisen
11	Vibraphone	71	Clarinet	131	Glass instrument	191	Bass Flute	251	Electronic Shamisen
12	Marimba	72	Piccolo	132	Bright Dulcimer	192	Distortion Contrabass	252	Bright Sitar
13	Xylophone	73	Flute	133	Rhythm Grand Piano	193	Contrabass Lead	253	Whistle Accord
14	Tubular Bells	74	Recorder	134	Traditional Piano	194	Violin Lead	254	rhythm Nation
15	Dulcimer	75	Pan Flute	135	Aluminum jean	195	Cello Lead	255	Bright Koto
16	Hammond Organ	76	Bottle Blow	136	Rock Grand Piano	196	Pizzicato rhythm	256	Koto Lead
17	Percussive Organ	77	Shakuhachi	137	Electronic organ	197	high Harp	257	Diplophonia Koto
18	Reed Organ	78	Whistle	138	Psychedelic electronic	198	Harp ensemble	258	Baritone Koto
19	Church Organ	79	Ocarina	139	Water jean	199	Synth Harp	259	Synth Koto
20	Reed Organ	80	Lead 1 (square)	140	Bright Guitar	200	Baritone Trumpet	260	Environmental Lead
21	Accordion	81	Lead 2 (sawtooth)	141	Orchestra piccolo	201	Trumpet ensemble	261	Metal Lead
22	Harmonica	82	Lead 3 (caliope lead)	142	Heavy metal guitar	202	rhythm Trumpet	262	Orchestra Lead
23	Tango Accordion	83	Lead 4 (chiff lead)	143	Crystal guitar	203	high Trumpet	263	Glockenspiel Lead
24	Acoustic Guitar (nylon)	84	Lead 5 (charang)	144	Queer electric Piano	204	Synth Trumpet	264	Bass Lead
25	Acoustic Guitar (steel)	85	Lead 6 (voice)	145	Bright bass	205	Bass Trombone	265	Fifths Lead
26	Electric Guitar (jazz)	86	Lead 7 (fifths)	146	Rock Electric Bass	206	Trombone ensemble	266	Wind Lead

27	Electric Guitar (clean)	87	Lead 8 (bass+lead)	147	Rhythm Electric Bass	207	rhythm Trombone	267	Atmosphere Lead
28	Electric Guitar (muted)	88	Pad 1 (new age)	148	Psychedelic Bass	208	high Trombone	268	Sharp Lead
29	Overdriven Guitar	89	Pad 2 (warm)	149	Heavy metal bass	209	Mediant Trombone	269	Bright Lead
30	Distortion Guitar	90	Pad 3 (polysynth)	150	Magic electronic	210	Synth Trombone	270	East Nation Pad
31	Guitar Harmonics	91	Pad 4 (choir)	151	Bright violin	211	Violin French Horn	271	Atmosphere Pad
32	Acoustic Bass	92	Pad 5 (bowed)	152	Atonic violin	212	French Horn ensemble	272	Clear Pad
33	Electric Bass(finger)	93	Pad 6 (metallic)	153	Heavy bass orchestra	213	Electronic French Horn	273	electric Piano Pad
34	Electric Bass (pick)	94	Pad 7 (halo)	154	Synth clarinet	214	Synth French Horn	274	Clean Guitar Pad
35	Fretless Bass	95	Pad 8 (sweep)	155	Interactive Lead	215	Psychedelic Synth Brass	275	Western Pad
36	Slap Bass 1	96	FX 1 (rain)	156	For the keyboard	216	Distortion Synth Brass	276	Sci-fi Pad
37	Slap Bass 2	97	FX 2 (soundtrack)	157	Bagpipes	217	Vibraphone Synth Brass	277	Metal Sci-fi Pad
38	Synth Bass 1	98	FX 3 (crystal)	158	Suona	218	Rock Synth Brass	278	Clarinet Pad
39	Synth Bass 2	99	FX 4 (atmosphere)	159	Pipa	219	Synth Muted Trumpet	279	Electronic dance Pad
40	Violin	100	FX 5 (brightness)	160	Church Piano	220	Soprano Sax ensemble	280	Psychedelic electronic
41	Viola	101	FX 6 (goblins)	161	Church electric Piano	221	Rhythm Soprano Sax	281	Double Kalimba
42	Cello	102	FX 7 (echoes)	162	Synth Piano	222	Synth Soprano Sax	282	Bright Kalimba
43	Contrabass	103	FX 8 (sci-fi)	163	Baritone Piano	223	National Sax	283	Crystal Kalimba
44	Tremolo Strings	104	Sitar	164	Piano PAD	224	Metal Sax	284	Synth Kalimba
45	Pizzicato Strings	105	Banjo	165	String Piano	225	Baritone Sax ensemble	285	Wind Bagpipe
46	Orchestral Harp	106	Shamisen	166	Metal Piano	226	Crystal Sax	286	high Bagpipe
47	Timpani	107	Koto	167	Light rhythm Piano	227	Soft Baritone Sax	287	Orchestra Bagpipe
48	String Ensemble 1	108	Kalimba	168	electric Piano Pad	228	Synth Baritone Sax	288	Bright Bagpipe
49	String Ensemble 2	109	Bagpipe	169	Classical piano	229	Heavy metal Sax	289	Baritone Bagpipe
50	Synth Strings 1	110	Fiddle	170	Guitar Organ	230	Church Oboe	290	Slap Bagpipe
51	Synth Strings 2	111	Shanai	171	An Electric Guitar	231	Bass Oboe	291	Environmental Shanai
52	Choir Aahs	112	Tinkle Bell	172	Synthesis Nylon Guitar	232	Bright Oboe	292	Mediant Shanai
53	Voice Oohs	113	Agogo	173	Synth Electronic	233	Bright Oboe	293	Baritone Shanai

					Guitar				
54	Synth Voice	11 4	Steel Drums	174	Bright Clean Guitar	234	distortio oboe	294	Synth Shanai
55	Orchestra Hit	11 5	Woodblock	175	Orchestra Guitar	235	English Horn ensemble	295	High Shanai
56	Trumpet	11 6	Taiko Drum	176	Psychedelic Guitar	236	Pizzicato English Horn	296	Steel Drums Lead
57	Trombone	11 7	Melodic Tom	177	Bright organ	237	Diplophonia English Horn	297	Lyric Steel Drums
58	Tuba	11 8	Synth Drum	178	Pick organ	238	Bright English Horn	298	Orchestra Steel Drums
59	Muted Trumpet	11 9	Reverse Cymbal	179	Synth accordion	239	Synth English Horn	299	Synth Steel Drums

No.	Name of rhythm	No.	Name of rhythm	No.	Name of rhythm	No.	Name of rhythm	No.	Name of rhythm
00	Beat 1	60	Country3	120	India samba1	180	Jump Blues	240	Western Swing
01	Beat 2	61	Country4	121	India samba2	181	New Orleans Blues	241	Alt-Country
02	Beat 3	62	Country waltz1	122	Jazz soul	182	New York Blues	242	Americana
03	Beat 4	63	Country waltz2	123	Country swing1	183	Piano Blues	243	Charanga
04	Beat 5	64	Country5	124	Country swing2	184	Soul Blues	244	Tropical
05	Beat 6	65	Country6	125	Country swing3	185	Urban Blues	245	Ambient
06	Beat 7	66	Country7	126	Pop waltz	186	Afro Beat	246	Punk Metal
07	Beat 8	67	Slow country1	127	Pop classic	187	Afro Pop	247	Experimental Rock
08	Beat 9	68	Slow country2	128	OrientalBeat1	188	Celtic Pop	248	Noise-Rock
09	Beat 10	69	Soul country	129	OrientalBeat2	189	Hawaiian Pop	249	Celtic New Age
10	Beat 11	70	Baiao	130	OrientalBeat3	190	Indian Pop	250	Ethnic Fusion
11	Beat 12	71	Bequine	131	OrientalBeat4	191	European Traditions	251	Techno-Tribal
12	Beat 13	72	Bolero	132	OrientalBeat5	192	World Fusion	252	Experimental
13	Beat 14	73	Bossanova	133	OrientalBeat6	193	Dou Jin	253	Minimalism
14	Rock 1	74	Lambada	134	OrientalBeat7	194	Shima Uta	254	Traditional Pop
15	Rock 2	75	Mambo	135	OrientalBeat8	195	Enka	255	Noise
16	Cntr Rock	76	Samba	136	OrientalBeat9	196	Japanese Folk Music	256	Classical beat1
17	Country Rock	77	Reggae	137	OrientalBeat10	197	Middle East Pop	257	Classical beat2
18	Dance Rock	78	Rhumba	138	OrientalBeat11	198	Pop baiao	258	Classical beat3
19	Easy Rock	79	Tango	139	OrientalBeat12	199	Pop bequine	259	Classical beat4
20	Glam Rock	80	Habanera	140	OrientalBeat13	200	New Age Latin	260	Classical beat5
21	Hard Rock1	81	March1	141	OrientalBeat14	201	New bossanova	261	Classical beat6
22	Hard Rock2	82	March2	142	Jazz Rock1	202	Rock lambada	262	Classical beat7
23	Pop Rock	83	Polka1	143	Jazz Rock2	203	Bluse mambo	263	Classical beat8
24	Rock+Roll	84	Polka2	144	Soft Rock	204	Pop samba	264	Classical beat9
25	Rock Beat	85	Polka3	145	Classic Rock	205	Reggae Ballad	265	Classical beat10
26	Rock Folk	86	Vallenato	146	Folkrock1	206	Pop Rhumba	266	Classical beat11
27	Rocky Pop	87	Waltz1	147	Folkrock2	207	Rock Tango	267	Classical beat12
28	Dance 1	88	Waltz2	148	Waltz Rock	208	Britpop1	268	Classical beat13
29	Dance 2	89	Waltz3	149	Heavy metal rock1	209	Britpop2	269	Classical beat14
30	Dance 3	90	Pop	150	Heavy metal rock2	210	Britpop3	270	Contemporary R&b1
31	Dance 4	91	Love ballad	151	70' Rock	211	Britpop4	271	Contemporary R&b2

32	Dance 5	92	Easy Beat	152	80' Rock	212	Trip Hop1	272	Contemporary R&b3
33	Dance 6	93	Soft Beat	153	Middle Eastern rock	213	Trip Hop2	273	Contemporary R&b4
34	Dance 7	94	Shuffle	154	Traditional Rock	214	Chamber pop	274	Contemporary R&b5
35	Dance 8	95	Cobmo	155	Rock Disco	215	Britpopwaltz 1	275	Deep Funk
36	Dance 9	96	Shuffle1	156	Modern dance1	216	Britpopwaltz 2	276	Doo Wop
37	Dance 10	97	Shuffle2	157	Modern dance2	217	Britpopwaltz 3	277	Left-Field Hip-Hop
38	Soul funk	98	Slow folk	158	Modern dance3	218	Classical ballad1	278	Motown
39	Euro soul	99	Step	159	Modern dance4	219	Classical ballad2	279	Neo-Soul1
40	Funky soul1	100	Euro pop	160	Modern dance5	220	Light Ballad	280	Neo-Soul2
41	Funky soul2	101	Bachata beat1	161	New century1	221	Rhythm Ballad	281	Neo-Soul3
42	Funky soul3	102	Bachata beat2	162	New century2	222	Hard House	282	New Jack Swing
43	Funky soul4	103	Africa bossanova	163	New century3	223	Deep House	283	Urban
44	Funky soul5	104	China dance	164	RockDance1	224	Acid House	284	Contemporary Instrumental
45	Slow soul1	105	Pop beat	165	RockDance2	225	Progressive House	285	Meditation
46	Slow soul2	106	Vienna waltz	166	Psyche delic 1	226	Epic House	286	Neo-Classical1
47	Soul	107	Africa beat	167	Psyche delic 2	227	Trible House	287	Neo-Classical2
48	big band1	108	Africa mambo	168	Soft Rock	228	Big Beat	288	Neo-Classical3
49	big band2	109	Euro march1	169	Post Rock	229	Down tempo	289	New Acoustic
50	blue grass	110	Euro march2	170	Goth Psychedelic	230	Electro1	290	Solo Instrumental
51	jazz samba	111	Euro merengue1	171	Soul Psychedelic 1	231	Electro2	291	Space
52	Jazz waltz	112	Euro merengue2	172	Soul Psychedelic 2	232	Electro3	292	Spiritual
53	Jazz1	113	Middle East dance	173	Soul Psychedelic 3	233	House dance	293	Rock New Age
54	Jazz2	114	Africa dance	174	Soul Psychedelic 4	234	Idm	294	Ragtime
55	Swing1	115	Pop samba1	175	Soul Psychedelic 5	235	Jungle Drum	295	Bebop or Bop
56	Swing2	116	Pop samba2	176	Soul Psychedelic 1	236	Techno	296	Cool jazz
57	Swing3	117	Africa reggae	177	Electric Blues	237	Trance	297	Free jazz
58	Country1	118	Euro rhumba1	178	Folk Blues	238	Trip-Hop	298	Jazz-Rock & Fusion
59	Country2	119	Euro rhumba2	179	Jazz Blues	239	Experimenta l Electronic	299	Jazz Funk

No.	The name of song	No.	The name of song	No.	The name of song
00	London Bridge Is Falling Down	17	Hand in hand	34	Prom queen
01	Fantasy	18	Two hundred and fourteen	35	Ni Mengruoze
02	The twist	19	Fkey	36	Nen blauen Donau
03	Butter fly	20	Mozart Symphonies	37	Hawthorn
04	Paddle a canoe	21	The girl's Prayer	38	Mary had a little lamb
05	Country songs	22	Nocturne	39	Yellow ribbon
06	Rhythm of the rain	23	Another day in paradise	40	Toreador Song
07	Serenade	24	Red River Valley	41	Radetzky march
08	Bluegrass Music	25	Green sleeves	42	Radiant
09	Music moment	26	Mozart Piano Sonatas	43	Long Long Ago
10	Merry Christmas	27	Orange and lemon	44	Katyusha
11	American Patrol	28	Hallelujah	45	Susanna
12	Flower	29	Minuet	46	Little star
13	Pour Elise	30	Handshake	47	I Don't Care
14	Direct seeding	31	Rain	48	Minuet in G major
15	Turkey March	32	Pamela	49	Carman Overture
16	A cradle	33	Bnnie Edgar		

Trouble	Possible reason/eliminating method
Accompanied by noise whenever the power is switched ON or OFF.	This is normal. Please do not worry.
No sound while pressing any key with power switched on	Are the Master Volume control and accompaniment Volume levels turned to the proper position. The internal speaker system is automatically shut off when some equipment is plugged to the headphone jack.
The sound is distorted or intermittent. More seriously, the instrument crashed.	In this case, unqualified DC-adapter is probably in use or your batteries are probably flat and need replacement.
The note and note quality under the same voice are tiny different	This is normal perhaps the note with this tiny difference in note quality is initially adopted.
Sustain produces longer or shorter when used	This is normal. In this case, the best sustain effect for each note is initially set by the producer.
Master Volume and Accompaniment volume is changed	Are the Master control and accompaniment volume turned to proper levels?
The accompaniment key changes while you are playing synchronously.	Perhaps you accidentally pressed a key in the left-hand range. (left 19 keys of keyboard)
No sound, no LED display when AC-Power adapter is in use	Is there power available in power socket and the AC-adapter is well plugged into power jack? Is the Power jack in good connection with AC-Power adapter
No sound, no LED display when the batteries are used.	Are you sure the batteries are properly placed with Anode/cathode or perhaps the batteries are flat.
The pitch of note changes	Is the "Transpose" +/- turned to be "00" position?
The speakers make noise when Mobil phone is used nearby.	The mobile phone nearby should be switched off or placed far from the instrument. Perhaps the mobile phone interfere the instrument and cause the noise.

■ Standard

- GB8898-2011 GB17625.1-2012
- GB13837-2012

■ Display

- LED Display

■ Voice

- 300 kinds of voices

■ Rhythm

- 300 kinds of rhythm

■ Demo song

- 50 demo songs

■ Effect control

- Keyboard drum、 sustain、 vibrato、 keyboard split、 transpose、 fine tuning、 beat、 pitch bend

■ Record and program

- Record、 play、 program

■ Percussion

- 8 kinds of panel percussion

■ Accompaniment control

- Start/stop、 syn、 fill in、 tempo

■ Chord control

- Single finger、 fingered chord、 chord clear

■ Intelligent teaching

- Demo one、 Demo all、 one key teaching、 follow teaching

■ Other control

- Power swith、 accomp volume

■ External jack

- DC9V power input、 microphone input、 headphone output

■ Diapason

- C2-C7

■ Intonation

- ≤ 5 cents

■ Format

- 1008x431x171(mm)

■ Net weight

- 5.4Kg

■ Power adapter

- DC9V 500mA

■ Quiescent current

- 120mA

■ Random accessories

- Adapter、 song sheet holder、 manual